



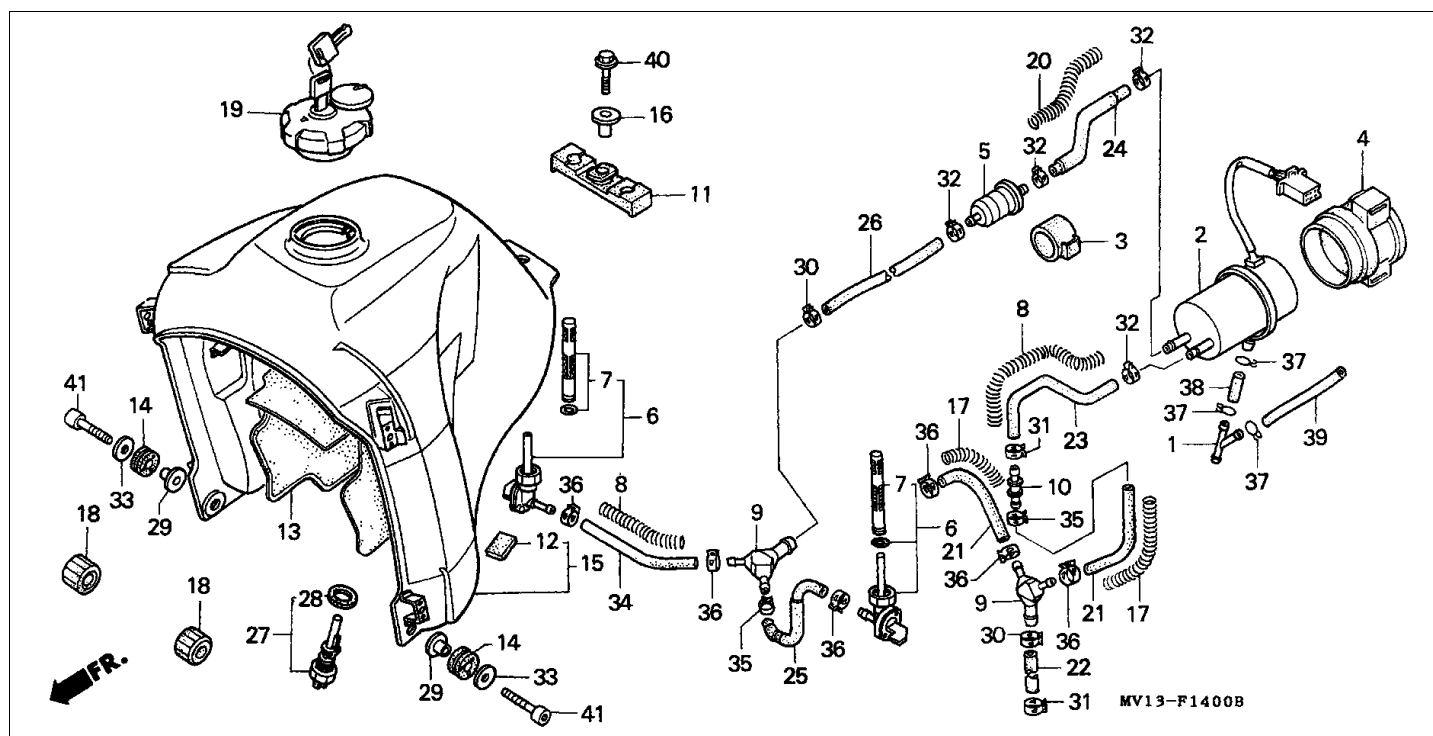

Block F-14 FUEL TANK/FUEL PUMP

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	16235-MG2-880	JOINT, VENT TUBE	001	0
2	16710-MV1-005	PUMP ASSY., FUEL	001	0
3	16711-MF2-000	HOLDER, STRAINER	001	0
4	16711-MN8-000	RUBBER, FUEL PUMP MOUNTING	001	0
5	16900-MG8-003	STRAINER COMP., FUEL	001	0
6	16950-MV1-000	COCK ASSY., FUEL	002	0
7	16952-MS8-005	SCREEN, FUEL STRAINER	002	0
9	16959-MF2-880	JOINT, FUEL TUBE	002	0
10	16966-MJ4-670	JOINT, FUEL TUBE	001	0
11	17503-MM9-000	RUBBER, RR. TANK	001	0
12	17511-MS8-300	CUSHION	001	0
13	17511-MV1-000	SILENCER, FUEL TANK	001	0
14	17513-HA5-000	RUBBER, FUEL TANK SETTING	002	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE1*	001	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE2*	001	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE3*	001	0
16	17525-KG7-830	COLLAR, FUEL TANK MOUNTING	001	0
17	17532-404-000	SPRING, FUEL TUBE COVER	002	0
18	17611-MM9-000	CUSHION, FUEL TANK FR.	002	0
19	17620-MN9-013	FUEL FILL CAP COMP.	001	0
20	17684-MS8-000	WIRE, GUARD	001	0
21	17684-MV1-000	TUBE F, FUEL	002	0
22	17685-MV1-000	TUBE E, FUEL	001	0
23	17686-MV1-000	TUBE A, FUEL	001	0
24	17687-MS8-000	TUBE B, FUEL	001	0
25	17688-MV1-000	TUBE C, FUEL	001	0
26	17689-MV1-000	TUBE D, FUEL	001	0
27	37810-MS8-008	SENSOR, FUEL RESERVE	002	0
28	37811-MB1-008	PACKING, FUEL RESERVE SENSOR	002	0
29	90505-HA5-000	WASHER, TANK SETTING	002	0
30	91405-MS8-000	CLAMP, TUBE, (D17)	002	0
31	91405-PH7-003	CLAMP, TUBE (D15)	002	0
32	91406-MS8-000	CLAMP, TUBE, (D14.5)	004	0
33	94103-08800-	WASHER, PLAIN, 8MM	002	0
34	95001-7535040	TUBE, FUEL, 7.3X350 (95001-75001-60M)	001	0
35	95002-02100-	CLIP, TUBE (B10)	002	0
36	95002-4120004	CLAMP, TUBE (D12)	006	0
37	95002-50000-	CLIP, TUBE (C9)	003	0

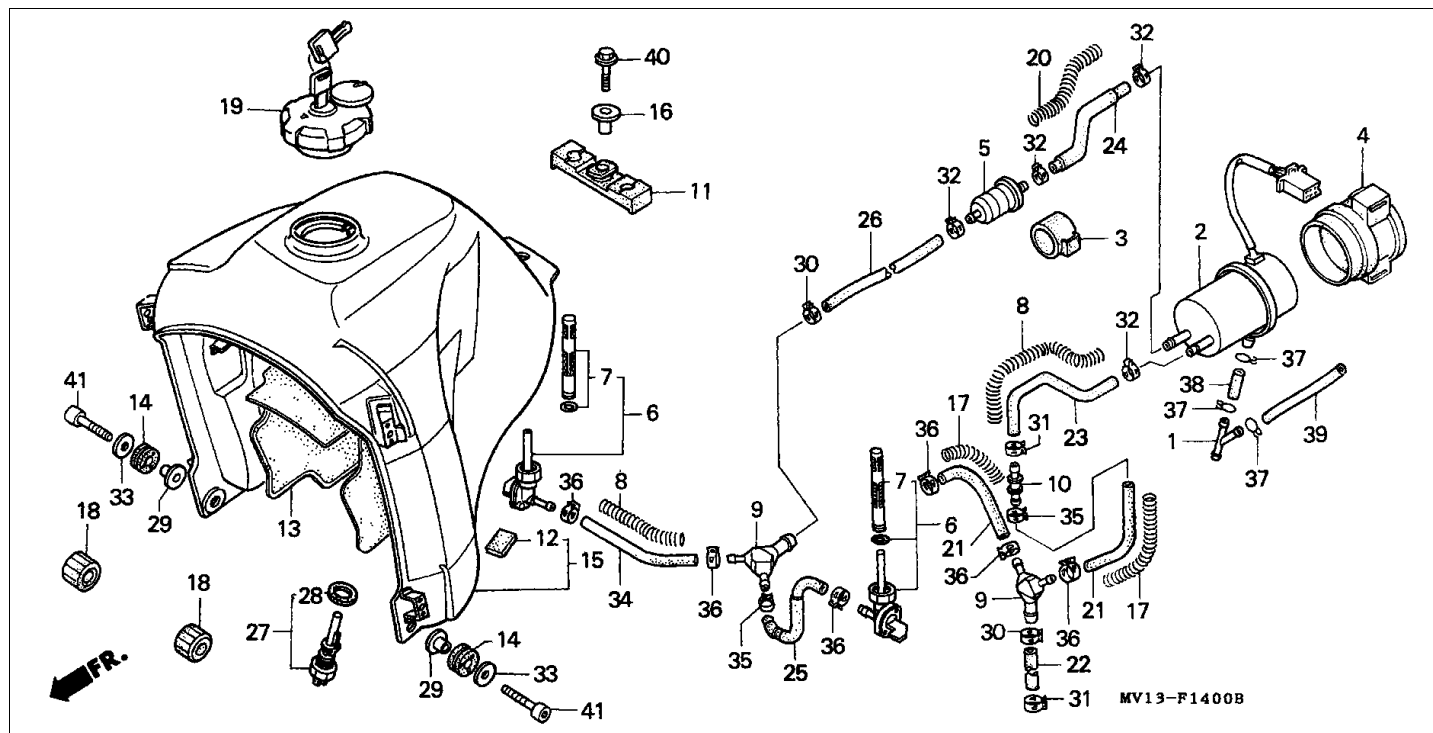

Block F-14 FUEL TANK/FUEL PUMP

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
38	95005-5003030	TUBE, 5X30 (95005-50001-30M)	001	0
39	95005-5039030	TUBE, 5X390 (95005-50001-30M)	001	0
40	95801-0803500	BOLT, FLANGE, 8X35	001	0
41	96600-0803507	BOLT, SOCKET, 8X35	002	0